

WHELEN AEROSPACE TECHNOLOGIES

Phone: (860) 526-9504 Fax: (860) 526-2009 Internet: www.flyWAT.com

Sales/Service e-mail: info@flyWAT.com

Installation Guide/ICA: Aviation model(s) OR6501GE, OR6501RE P/N 01-0790701-01, 01-0790701-02 Orion 650E Wingtip Position/Anti-Collision Lighthead

TSO-C30c TYPE I & II; APPROVED

TSO-C96a CLASS II: APPROVED The conditions and tests required for TSO approval of this article are minimum performance standards. Those installing this article either on or within a specific type or class of aircraft must determine that the aircraft installation conditions are within the TSO standards which include any accepted integrated non-TSO functions. TSO articles and any accepted integrated non-TSO function(s) must have separate approval for installation in an aircraft. The article may be installed only according to 14 CFR part 43 or the applicable airworthiness requirements.

SPECIFICATIONS:

Nominal Operational Voltage:	12VDC
(Operational from 9-14VDC)	
Input Current:	
Position Lights	0.3 Amps
Anti-Collision Light (Avg.)	0.7 Amps
Anti-Collision Light (Pulse)	3.6Amps
Flashrate	45 ± 5 FPM

Certain types of installations may require additional testing.

EQUIPMENT LIMITATIONS:

An approved forward position lighting system consists of three lights, one located on the tail and one located on each wingtip. Model OR650()E is a wingtip position and anti-collision light. The assembly should be mounted as far outboard on the aircraft as practical. The baseplate must be mounted parallel to the vertical and horizontal centerlines of the aircraft to project the patterns properly. This assembly must be mounted behind a clear lens.

AIRWORTHINESS LIMITATIONS:

The Airworthiness Limitations section is FAA approved and specifies inspections and other maintenance required under §43.16 and §91.403 of the Federal Aviation Regulations, unless an alternative program has been approved.

No airworthiness limitations are associated with the installation of the LED position/anti-collision light.

CONTINUED AIRWORTHINESS:

The forward position light is designed with green or red LEDs. The anticollision light is designed with 24 white LEDs. If any one LED fails, the unit must be repaired or replaced.

Note: To reduce eye strain, use an optical filter such as dark glasses or a blue covering dome during LED inspection.

PERIODIC INSPECTIONS:


An annual inspection shall be performed unless the OEM specifies a shorter interval.

INSTALLATION PROCEDURES:

The following information is to assist you in installing a WAT light system.

- Choose the appropriate light assembly.
- Using the mounting detail information provided, prepare the aircraft for 2. means to secure the light assembly.
- Carefully remove the #4 phillips head screw (qty. 4). Remove the light 3. assembly from the baseplate. CAUTION! Do not touch the LED with either fingers or sharp objects. This could soil and/or damage the lens and affect the optical performance of the LEDs.
- Using the appropriate hardware install the baseplate to the aircraft.
- Route the wires through the opening in the baseplate. Connect the light inputs according to the chart shown. Connect the power lead to an appropriately sized breaker. Connections to be according to FAA approved methods.
 - Note: SYNC is a low-power, bi-directional control signal. Connecting to the synchronize signal of any WAT LED anti-collision assembly to another WAT anti-collision assembly will cause the lights to flash at the same time. If Synchronization is not necessary, the connection may be
- Re-install the light assembly on to the baseplate and insure that all leads 6. are clear of any obstructions and secured as required.
- Check all avionics systems for interference from this installation.

- A flight check should be performed by a properly certified pilot.
- If required, update aircraft records utilizing FAA Field Approval (Form 337) or equivalent.

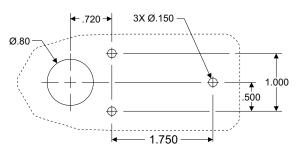

SUGGESTED MOUNTING DETAIL

